

2PTABLE(Solder Side)		1PTABLE(Parts Side)	
GROUND	A 1	GROUND	
GROUND	B 2	GROUND	
+5V	C 3	+5V	
+5V	D 4	+5V	
N/C	E 5	N/C	
+12V	F 6	+12V	
N/C	H 7	N/C	
N/C	J 8	N/C	
N/C	K 9	N/C	
SPEAKE-	L 10	SPEAKE+	
N/C	M 11	N/C	
VIDEO GREEN	N 12	VIDEO RED	
VIDEO SYNC	P 13	VIDEO BLUE	
N/C	R 14	GROUND	
N/C	S 15	N/C	
COIN SWITCH #2	T 16	COIN SWITCH #1	
2P START	U 17	1P START	
2P UP	V 18	1P UP	
2P DOWN	W 19	1P DOWN	
2P LEFT	X 20	1P LEFT	
2P RIGHT	Y 21	1P RIGHT	
2P BUTTON #1	Z 22	1P BUTTON #1	
2P BUTTON #2	a 23	1P BUTTON #2	
2P BUTTON #3	b 24	1P BUTTON #3	
2P BUTTON #4	c 25	1P BUTTON #4	
2P BUTTON #5	d 26	1P BUTTON #5	
2P BUTTON #6	e 27	1P BUTTON #6	
GROUND	f 28	GROUND	



Picture 2

2.System Setting

Press the setup button to into the system setup menu(Picture 2) (Picture 3):



Picture 3



Picture 4

- (1)IO/TEST: This option can test the machine's coin selector, joystick, buttons connection pandora's box is correct, test before is purple, after the test for yellow, again press for blue .(Picture 4)
- (2)CREDIT MODE: Press A button to select credit mode(1 coin 1 credit/2 coins 1 credit etc)
- (3)EXIT GAME: Press A button to select exit game mode. MENU/ exit to menu ;START+COIN/hold P1 start button and insert coin will exit game.
- (4)AUTO EXIT: Press A button to select. AFTER 3 MINUTES/will exit game if no playing over 3 minutes; OFF/this function will be closed.
- (5)SELECT GAME: Press A button to select. WITH COIN/can only select game after insert coin; ANY/can select game without insert coin.
- (6)GAME CONFIGURATION: (Picture 5)



Picture 5

Difficult & Lives

Press A button enter into the difficult & lifes setting menu (Picture 6).Move the joystick to pick up the game you want to setup, press A button to set the difficults; press B button to set the lifes (can not modify if the game doesn't have this option); press C button to unified all games' setting same as current game; press D button to exit the setting.



Picture 6

Display/Hide game

Press B button enter into the display/hide setting menu (Picture 7).Move the joystick to pick up the game you want to setup,press A button to display/hide;press B button will display all games; press C button will hide all games; press D button exit the setting.



Picture 7

(7)BOOK KEEPING

Game board can record all the number of insert coin, displayed in the top right-hand corner of the syetem menu, if you need to clean the total coin records, into the bookkeeping, Then prompt the enter password, The default password is 55555555, joystick up&down change the number, left&right

is next and return. (Picture8) after into can clean coin records and change the password. (Picture9)



Picture 8



Picture 9

Select change password, enter your old password need to confirm (Picture10), then enter a new password. (Picture11)



Picture 10

5



Picture 11

(8) SAVE SETTING & BOOT

Press A button to save the setting. (Picture 12)



Picture 12

(9) FACTORY SETTING & BOOT

Press A button will return to factory setting

6

