 
 


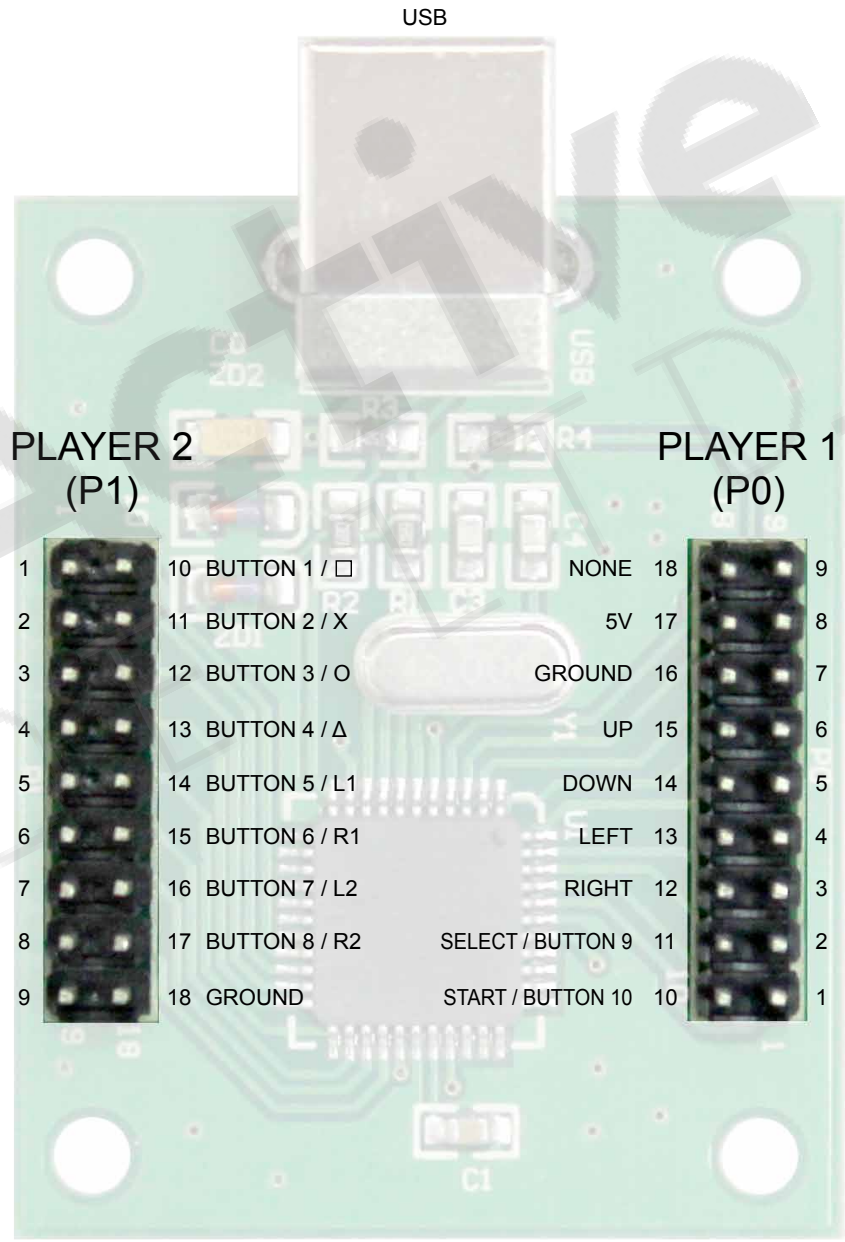

Retro
Active
Arcade

Xin-Mo USB 2 Controller Wire Map

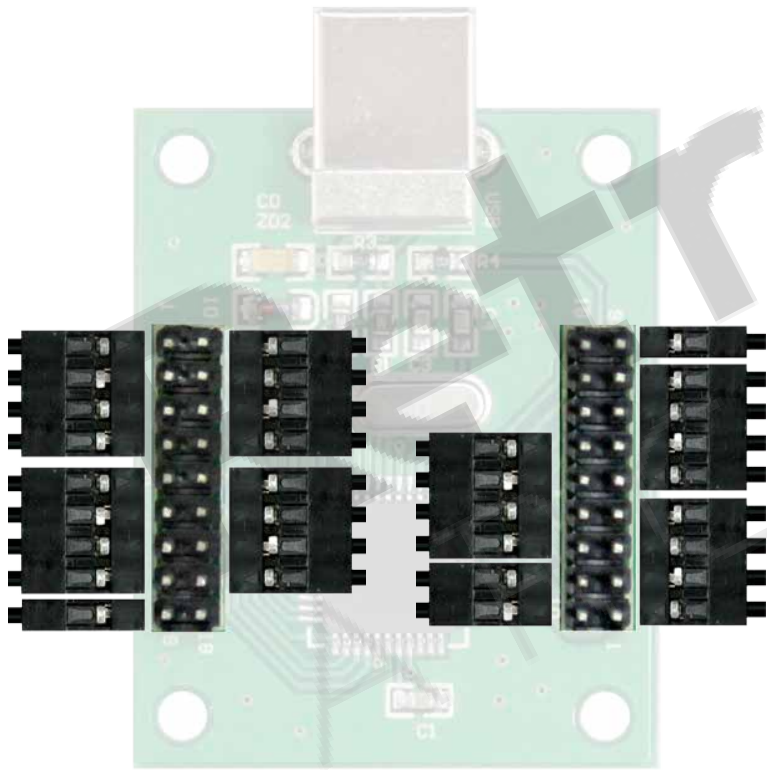

PLAYER 2 (P1)			PLAYER 1 (P0)					
RIGHT	1	10	BUTTON 1 / □	NONE	18	9	GROUND	
LEFT	2	11	BUTTON 2 / X	5V	17	8	BUTTON 8 / R2	
DOWN	3	12	BUTTON 3 / O	GROUND	16	7	BUTTON 7 / L2	
UP	4	13	BUTTON 4 / Δ	UP	15	6	BUTTON 6 / R1	
START / BUTTON	9	14	BUTTON 5 / L1	DOWN	14	5	BUTTON 5 / L1	
SELECT / BUTTON	10	15	BUTTON 6 / R1	LEFT	13	4	BUTTON 4 / Δ	
L3 / BUTTON	11	16	BUTTON 7 / L2	RIGHT	12	3	BUTTON 3 / O	
R3 / BUTTON	12	17	BUTTON 8 / R2	SELECT / BUTTON	9	11	2	BUTTON 2 / X
GROUND	9	18	GROUND	START / BUTTON	10	10	1	BUTTON 1 / □